


Figure 1A

Figure 1B

Figure 1C

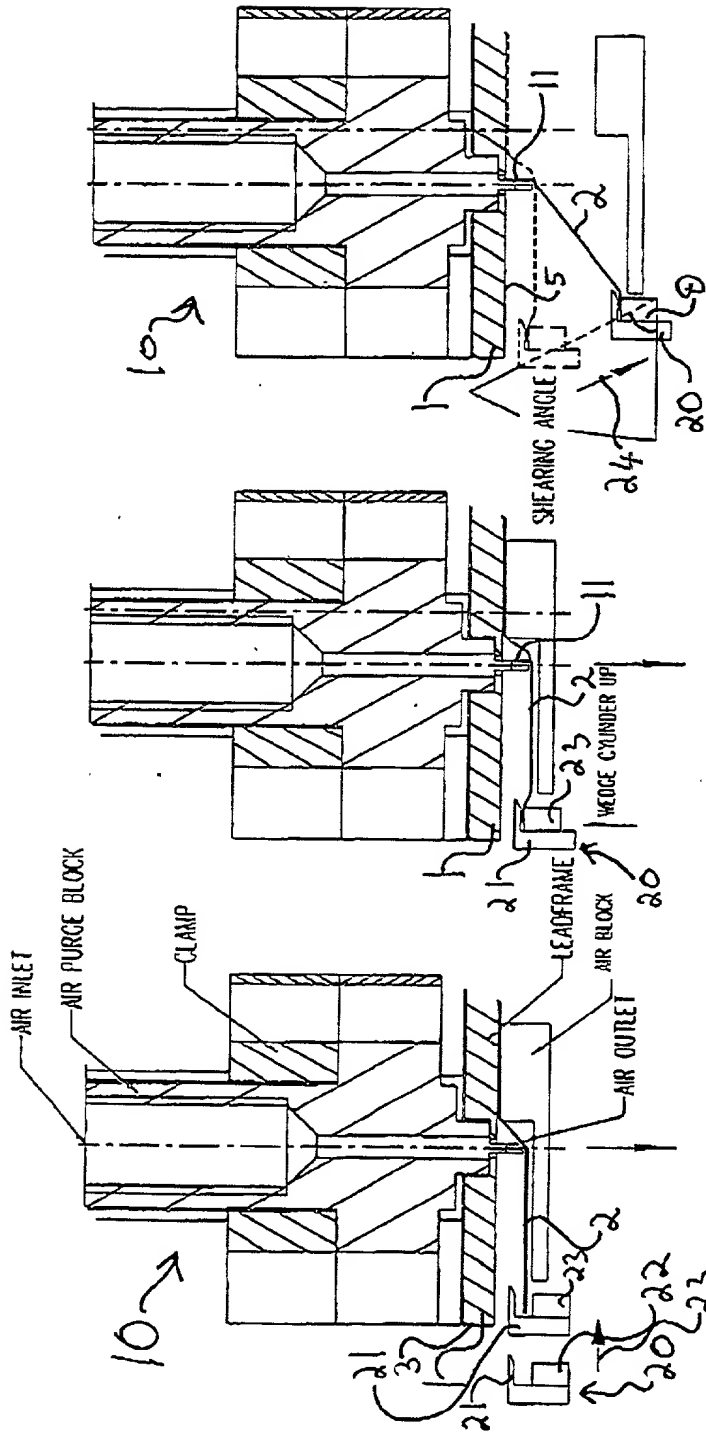

STEP 1 : AIR PURGE DOWN AND  
FINGER WEDGE INSERTED  
INTO MASKING TAPE

Figure 2A

STEP 2 : FINGER WEDGE MOVES UP  
AND GRIP ONTO THE MASKING TAPE

Figure 2B

STEP 3 : FINGER WEDGE SHEAR DOWN  
AT SHEARING ANGLE TO REMOVE  
MASKING TAPE FROM THE LEADFRAME

Figure 2C

